



65 – 67 Glencoe Road, Bushey, Herts, WD23 3DP UK Tel: (44) 208 420 4494 E-Mail: enquiries@asnu.com Web: www.asnu.com

Honda Short Injectors – How to Test on ASNU machines



Carefully remove top fitting from the injector, being careful not to snap it.





2. Fit ASNU 258 brass coupling on the top of the injector and ASNU 68A spacer under the bottom of the injector.



3. Mount to the ASNU machine test rail ASNU 156/156A or 156J depending on which machine and rail you have.

4. Connect the ASNU 70P injector harness to the machine and the injector.

5. Test and service as you would any other gasoline injector on an ASNU.